
Parts list 1–Only use for after-sales

It's risky to disassemble core shaft assembly.

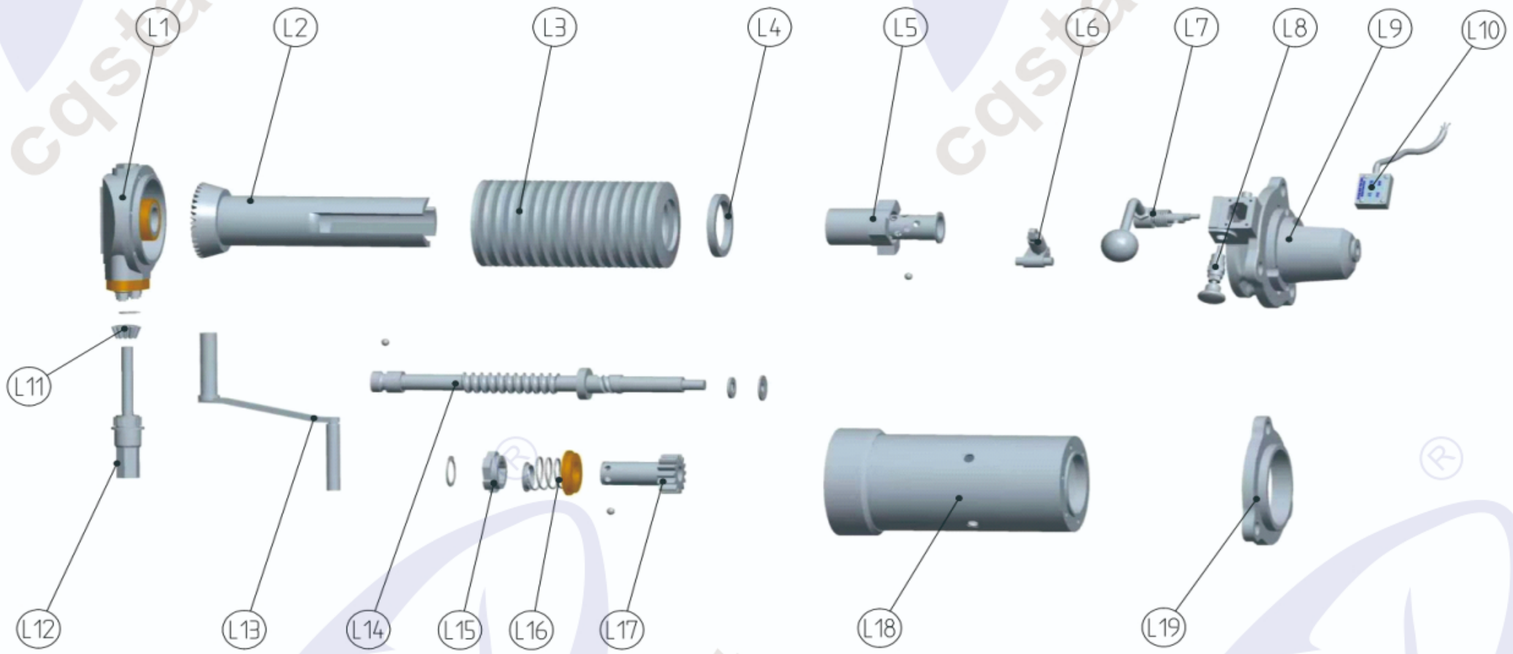

No.	Name	Remark	No.	Name	Remark
L1	Kit, Front cover		L11	Kit, Drive gear	Shim *1
L2	Kit, Driven gear		L12	Kit, Input shaft	Circlip *1
L3	Kit, Spring bundle		L13	Assy, Winding handle	
L4	Drive ring		L14	Kit, Main shaft	Φ8 Ball bearing *10，Shim*2
L5	Kit, Screw sleeve	Φ8 Ball bearing*16	L15	Kit, Ratchet	Φ7 Ball bearing *5， Circlip *1
L6	Kit,Lock	Swivel pin*1	L16	Kit, Spring locater	
L7	Kit,Release shaft	Spring*1	L17	Kit, Drive pinion	Φ7 Ball bearing *5， Circlip *1
L8	Assy, Reset knob		L18	Assy, Boby	
L9	Kit, Rear cover		L19	Spacer	
L10	Interlock switch				
Please always specify starter Assy number PN. and serial number SN , according to the sheet.					