
Parts list 2–Only use for after–sales

It's risky to disassemble core shaft assembly.

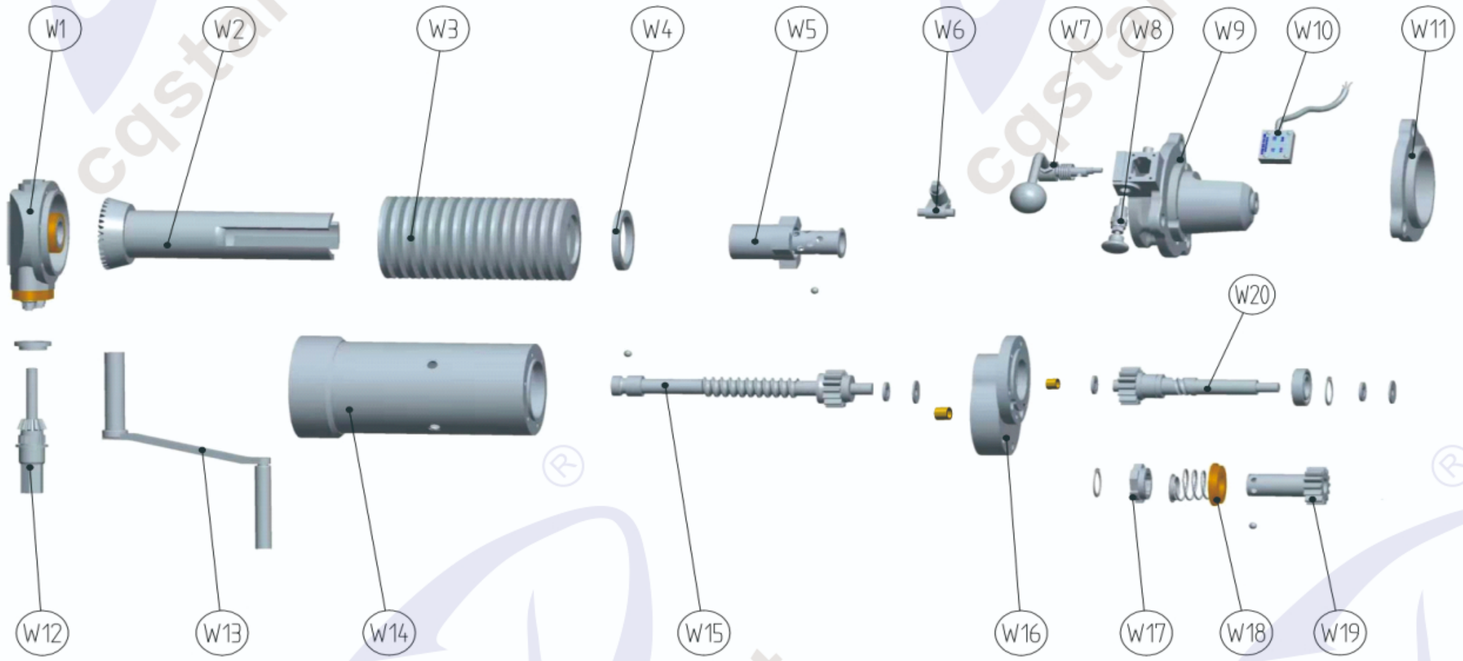

No.	Name	Remark	No.	Name	Remark
W1	kit, Front cover		W11	Spacer	
W2	kit, Driven gear		W12	kit, Input shaft	Thrust Washer*1
W3	kit, Spring bundle		W13	Assy, Winding handle	
W4	Drive ring		W14	Assy, Boby	
W5	kit, Screw sleeve	Φ8 ball bearing*16	W15	kit, Long shaft	Φ8 Ball bearing *10，Thrust Washer*1，Disk washer*1，Bush*1
W6	kit,Lock	Swivel pin*1	W16	Adapter	
W7	kit,Release shaft	Spring*1	W17	kit, Ratchet	Φ7 ball bearing *5， circlip *1
W8	Assey, Reset knob		W18	kit, Spring locater	
W9	kit, Rear cover		W19	kit, Drive pinion	Φ7 ball bearing *5， circlip *1
W10	Interlock switch		W20	kit, Short shaft	Bearing*1，circlip *1,Thrust Washer*2,Disk washer*1，Bush*1
Please always specify starter Assy number PN. and serial number SN , according to the sheet.					